



# Oaklea Woodcrafts

## Aston Martin Rollerball & Fountain Pen Kits Assembly Instructions

### Required Accessories:

- 7mm Pen Mandrel
- 4-piece Bushing Set RP355
- 11.7mm Drill Bit PBD2764
- 10mm Drill Bit PBD10
- Universal Barrel Trimmer
- Sandpaper/Finish
- Glue (Thick CA or Epoxy)




### Preparing the Blank:

- Prepare blank of at least 3/4" square. Cut two sections to the length of each tube. (Add 1/16" for trimming) Mark the center of each blank.
- Drill a centered hole lengthwise through each blank. Upper blank (shorter tube)—drill a 11.7mm hole through. Lower blank (longer tube)—drill a 10.0mm hole through.
- Glue each tube in the proper blank. Spread the glue over each tube. Insert the tube into the blank with a twisting motion to spread the glue evenly inside. Center each tube lengthwise inside the blank.
- When glue dries, square the ends of each blank.



## Turning the Blank

- Mount the bushings and blanks according the diagram above.
- Thread on the knurled nut and hand tighten to hold all components in place.
- Slide the tailstock up snugly against the mandrel shaft inserting the live center point into the mandrel dimple, lock in place.
- Hand tighten the quill adjustment to firm up the mandrel. (DO NOT overtighten, it could damage the mandrel.
- Using sharp tools, turn the blank down close to the bushing diameter. Turn the barrel (straight or to a profile of your choice)
- Sand the blank down to be flush with the bushings gradually increasing the sandpaper grits.
- Finish the barrel with your choice of polish. Allow sufficient time for the polish to cure.

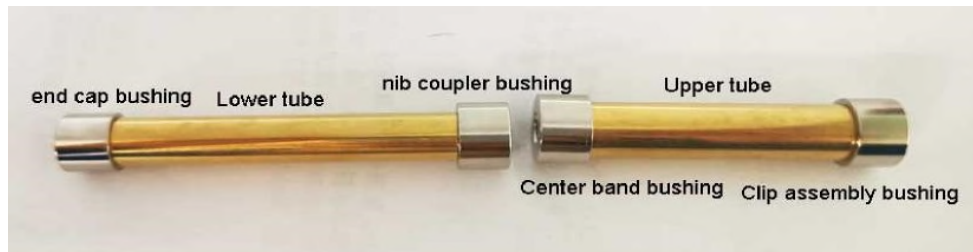

## Assembly

NOTE: Line up the components

according to the above diagram.

- Press the clip assembly to one end of the upper tube (shorter tube).
- Press the center band coupler, black end first, into the opposite end of the upper tube.

For Fountain Pen:

- Place the end cap into the end of the lower tube.
- Press the nib coupler into the opposite end of the lower tube.

- Attach the ink converter to the back of the fountain nib, then thread the fountain nib into the nib coupler.

For Rollerball Pen:

- Place the end cap into the end of the lower tube.
- Press the nib coupler into the opposite end of the lower tube.
- Insert the spring then the ink refill into the lower tube. Thread the nib into the nib coupler.